



Parts Index

* not to scale

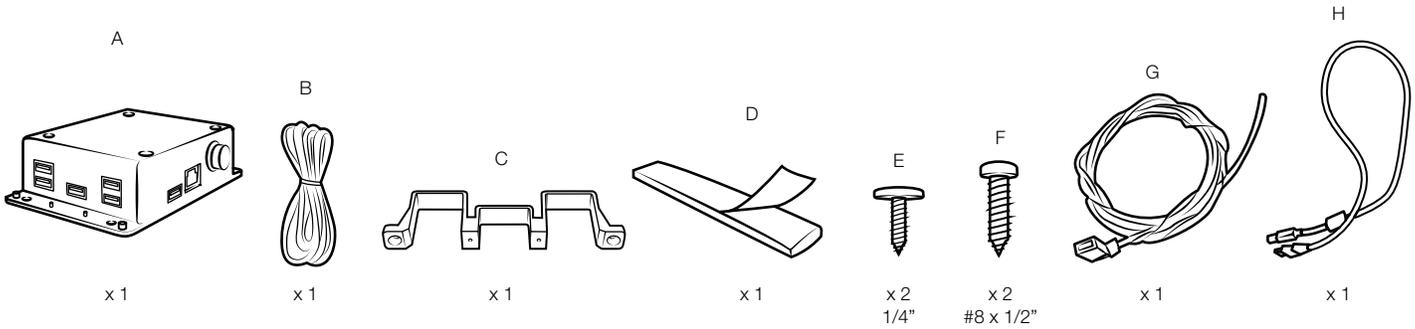


Ignition trigger can be wired to the ignition of the vehicle (or other 12v ignition source) to provide a timed disconnect to the connected peripherals after vehicle has been turned off. When vehicle ignition is off, RAM® Tough-Hub™ continues to provide power to the connected peripherals for a pre set duration of time. The default delay is pre set from the factory to 15 minutes.


1 To change default pre settings, remove housing and switch the small jumper component from "POS 2" to any of the other 3 positions.

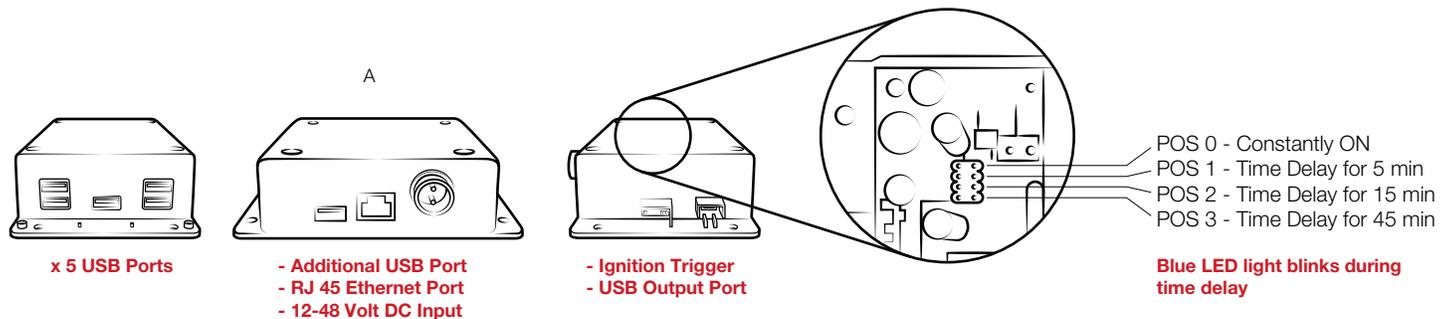

2 Cut (D) foam strip into three pieces to adhere under (C) USB port frame.

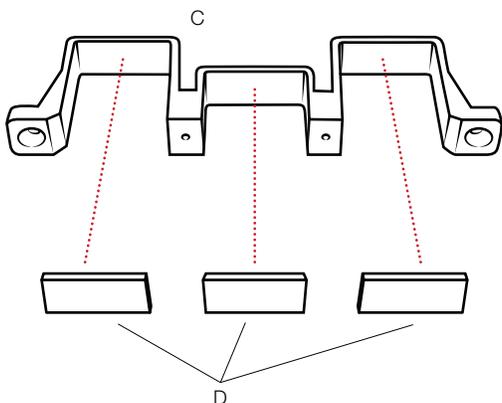

3 Position (C) USB port frame in front of the 5 USB ports and secure with (E) screws.

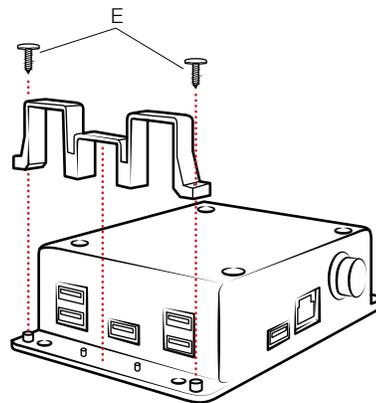

RMR-INS-234-HUB1



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.