




rammount.com  
1.800.497.7479  
support@rammount.com

# RAM® Combination Lock

## Unlock Mode


To unlock, align factory preset “----” or current combination (A) and pull plunger outward (C) until indentation is visible next to the arrow (B).

**Plunger IN:** Latch will be locked in position  
**Plunger OUT:** Latch will be loose

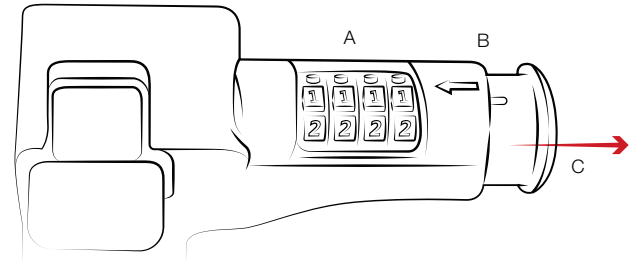

## Changing Lock Combination

- 1 Set lock to unlock mode (see above), with plunger pulled outward.
- 2 On reverse side, locate square notch on of slot to the left of combination numbers. Spin slot downward, bringing square notch to bottom of slot. Pen or screwdriver recommended.
- 3 Set new combination on the front side of lock in line with arrow.
- 4 Move slot back upward to original position until it stops. New combination will be set.

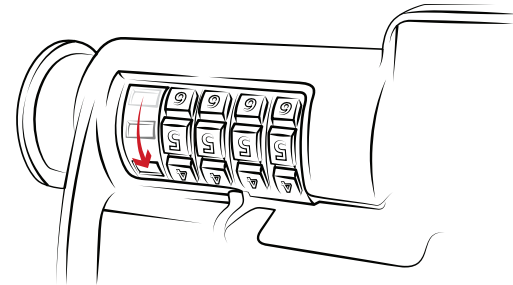

RMR-INS-CODELOCK