



ReAkta Knife

INSTRUCTION GUIDELINES

COLOURS AVAILABLE

ReAkta shown is heavy duty version



IMPORTANT:

Read these guidelines before you begin to use your ReAkta Knife. The Knife is supplied with the blade locked in. See blade change image 1 below.

The ReAkta Knife is a utility knife with a novel new safety feature. Whereas an enclosed blade 'Safety Knife' almost eliminates the risk of an accident, the ReAkta Knife will give a risk reduction compared to a 'fixed blade' or 'manual retract' knife.



KEY FEATURES

- Blade stays in the 'out' position whilst a controlled cut is being made, if the knife is jerked, shaken or dropped the blade will retract
 - The blade can be locked in the knife for safe storage
(Note: The blade will retract if you push the lock button up when the blade is out. It will not lock the blade in the out position)!
 - Moulded in tough glass filled nylon
 - Easy blade change and cleaning procedure
 - Standard (plastic blade carrier) and Heavy Duty (aluminium blade carrier) options available
 - Auto-retract version available
 - Straight, rounded, hook, super hook, convex and concave blades available
- IMPORTANT: Not all blades are interchangeable between ReAkta knives. If purchasing a different blade to the blade that is currently in your ReAkta knife, please contact us first.



BLADE CHANGE

STEP 1



Ensure the switch is in the 'unlock' position

STEP 2




Turn the locking button a quarter turn to the left, the button will then pop up but will not lift out of the knife body

STEP 3



Slide top half of the knife body back

STEP 4

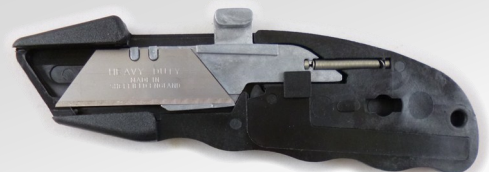

Reverse or replace the blades. Ensure switch is in the lock position when knife is not in use



Manufactured & Distributed by:-

The Safety Knife Company, Olympus Park, Quedgeley, Gloucestershire, GL2 4NF
Tel: 0845 223 20 50 Fax: 0845 223 20 51 sales@safetyknife.net www.safetyknife.net