


RAM® SUN VISOR ASSEMBLY GUIDE

PARTS INDEX:



- A. RAM® SUN VISOR SCREEN (QTY. 1)
- B. RAM® 1" BALL BASE WITH VISOR CLIP (QTY. 1)
- C. #6-32 X 1/2" MACHINE SCREW (QTY. 3)
- D. #6-32 NYLOCK NUT (QTY. 3)

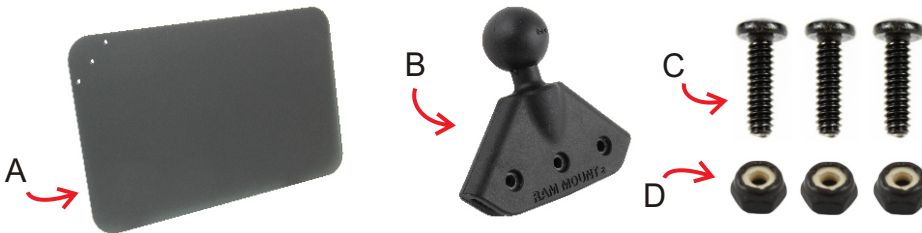

1. CAREFULLY PEEL LABELS FROM BOTH SIDES OF (A) SUN VISOR TO EXPOSE SCREEN.
RECOMMENDED: BEGIN PEELING FROM THE CORNER WITH THREE HOLES.

2. POSITION (B) BALL BASE OVER CORNER OF SUN VISOR, ALIGNING THE THREE HOLES.

3. ATTACH (B) BALL BASE TO (A) SUN VISOR SCREEN USING (C) SCREWS AND (D) NUTS.

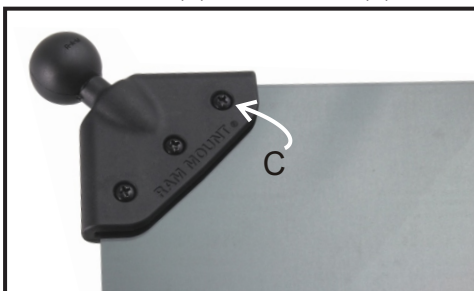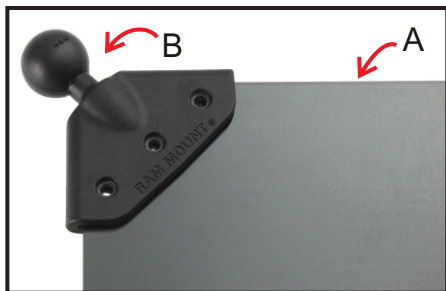

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com

CAUTION: TO AVOID SCRATCHING YOUR SUN VISOR,
USE ONLY CLOTH AND NON-AMMONIA CLEANER
WHEN CLEANING SUN VISOR.

**DO NOT USE PAPER PRODUCTS OR TISSUE TO
WIPE SUN VISOR.**




RMR-INS-393

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM® SUN VISOR ASSEMBLY GUIDE

PARTS INDEX:



- A. RAM® SUN VISOR SCREEN (QTY. 1)
- B. RAM® 1" BALL BASE WITH VISOR CLIP (QTY. 1)
- C. #6-32 X 1/2" MACHINE SCREW (QTY. 3)
- D. #6-32 NYLOCK NUT (QTY. 3)

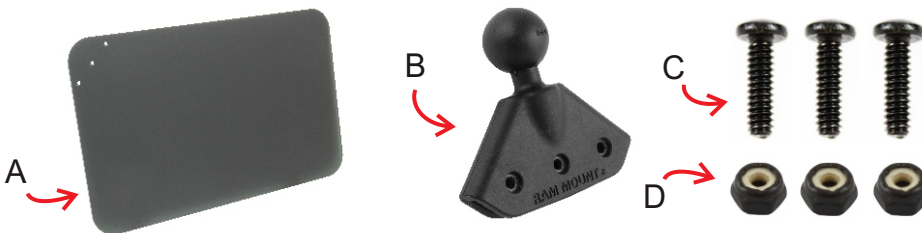

1. CAREFULLY PEEL LABELS FROM BOTH SIDES OF (A) SUN VISOR TO EXPOSE SCREEN.
RECOMMENDED: BEGIN PEELING FROM THE CORNER WITH THREE HOLES.

2. POSITION (B) BALL BASE OVER CORNER OF SUN VISOR, ALIGNING THE THREE HOLES.

3. ATTACH (B) BALL BASE TO (A) SUN VISOR SCREEN USING (C) SCREWS AND (D) NUTS.

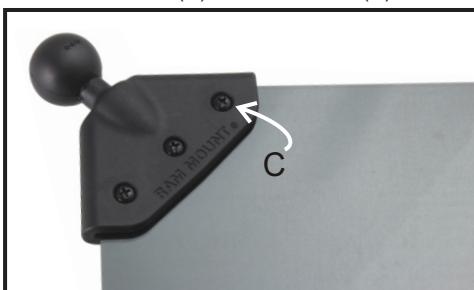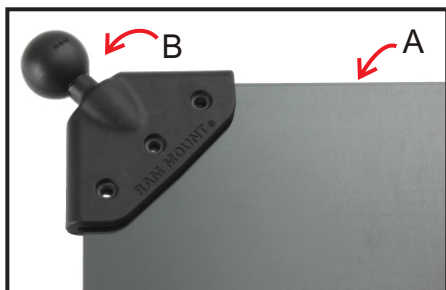

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com

CAUTION: TO AVOID SCRATCHING YOUR SUN VISOR,
USE ONLY CLOTH AND NON-AMMONIA CLEANER
WHEN CLEANING SUN VISOR.

**DO NOT USE PAPER PRODUCTS OR TISSUE TO
WIPE SUN VISOR.**



RMR-INS-393

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.