

Cylindrical Photoelectric Sensors



BRQ Series (front sensing type) PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Excellent noise immunity and minimal influence from ambient light
- Reverse power protection circuit, reverse output protection circuit, output short overcurrent protection circuit
- Mutual interference prevention function (except through-beam type)
- Sensitivity adjuster
- Light ON/Dark ON mode selectable by control wire
- Various materials : Plastic, Metal (Ni-plated Brass), SUS316L
- Long sensing distance : 30 m (through-beam type)
- Body size
 - BRQT, BRQM : Standard
 - BRQP : Standard, Short body
- Protection rating
 - BRQT : IP67 (IEC standard), IP69K (DIN standard)
 - BRQM, BRQP : IP67 (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
When using a separate power supply for the sensor and load, supply power to the sensor first.
- 10-30 VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 3
 - Installation category II

Product Components

Sensing type	Through-beam	Polarized retroreflective	Diffuse reflective
Product components	Product, instruction manual		
Reflector	-	MS-2A	-
Adjustment screwdriver	× 1	× 1	× 1
M18 fixing nut	× 4	× 2	× 2

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

BRQ ① - ② - ③ D T ④ - ⑤ - ⑥

① Material

T: SUS316L
M: Brass, Ni-plate
P: Plastic

④ Appearance

A: Standard
B: Short body (plastic material model)

② Sensing distance

Number: Sensing distance (unit: mm)
Number+M: Sensing distance (unit: m)

⑤ Connection

No mark: Cable type
C: Connector type

③ Sensing type

T: Through-beam
P: Polarized retroreflective
D: Diffuse reflective

⑥ Control output




No mark: NPN open collector output
P: PNP open collector output

Sold Separately

- Reflector: MS Series
- Bracket: BK-BR-A
- Retroreflective tape: MST Series
- Connector cable, connector connection cable
- Fixing cap for plastic short body: BK-BR-B


Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
 - Installation environment and background (reflected light)
 - Sensing distance and sensing target
 - Direction of target's movement
 - Feature data
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 14.7 N m (SUS316L, Brass, Ni-plate material model), 0.39 N m (plastic material model). Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

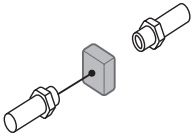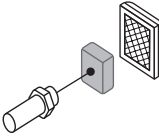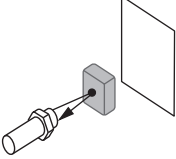Through-beam	Retroreflective	Reflective
		
Emitter - Receiver: Install to face each other	Sensor - Reflector: At least 0.1 m apart, install to face each other (parallel with the sensing side of the unit)	Sensor - Sensing target: Install to face each other (parallel with the sensing side of the unit)

Operation Timing Chart


Light ON mode

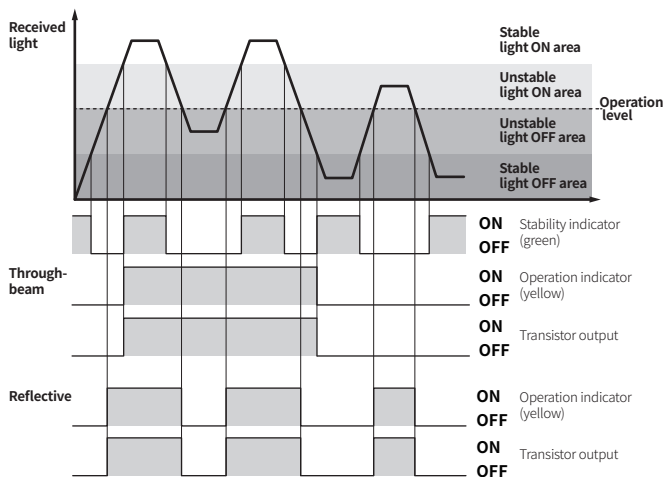


- In Dark ON mode, the waveforms are reversed.
- Operation indicator and transistor output differ from the sensing method.

Connections


Cable type: Emitter

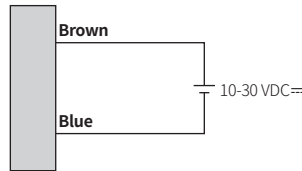

Cable type: Receiver, Polarized retroreflective, Diffuse reflective type

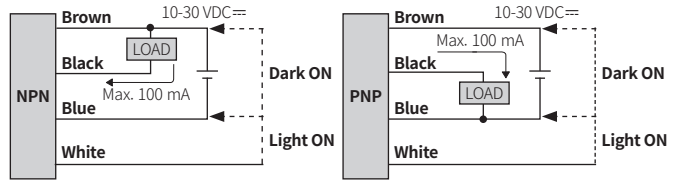

Connector type

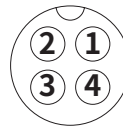

Pin	Color	Function
①	Brown	+V
②	White	CONTROL
③	Blue	0V
④	Black	OUT

- Connector pin ②, ④ are N.C (not connected) terminal for the emitter.


Operation mode selection

- Be sure to connect the control wire when selecting the operation mode. Failure to this instruction may result in product damage.


Operation mode	Wiring
Dark ON	Connect the control wire (white) to +V (brown)
Light ON	Connect the control wire (white) to 0V (Blue)

Circuit

NPN open collector output

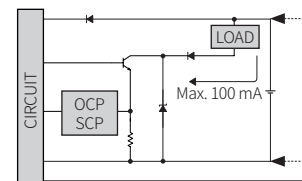

PNP open collector output

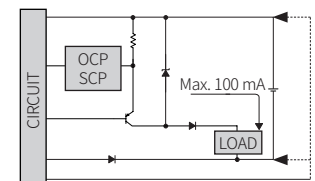

- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.


STEP	Status	Description
01	Received	Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
02	Interrupted	Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
03	-	Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.
- This dimensions shows the cable type. Refer to the 'Specifications' for the core, wiring, and connector.

A	Optical axis of emitter	D	Stability indicator (green)
B	Optical axis of receiver	E	Power indicator of emitter (red)
C	Operation indicator (yellow)	F	Sensitivity adjuster


SUS316L, Ni-plate, Brass material model

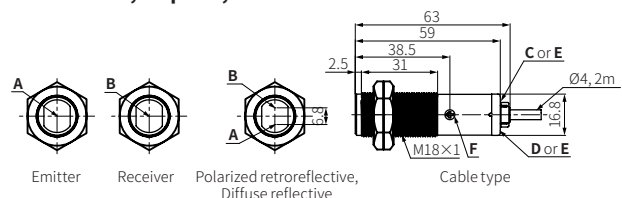


■ Plastic material model

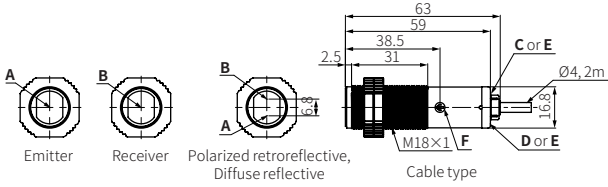

■ Plastic material, short body model

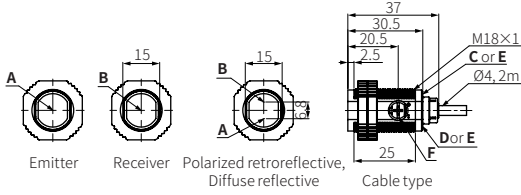


■ Reflector (MS-2A)

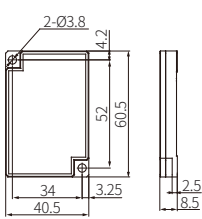


■ M18 fixing nut

- SUS316L, Ni-plate, Brass material model




- Plastic material model




Sold Separately: Bracket (BK-BR-A)

- Unit: mm, For the detailed drawings, follow the Autonics website.

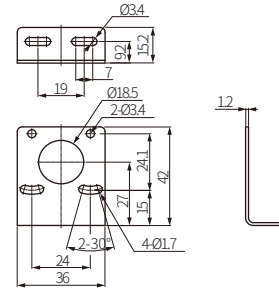

Sold Separately: Fixing Cap (BK-BR-B)

- Unit: mm, For the detailed drawings, follow the Autonics website.
- Only for the plastic material short body model

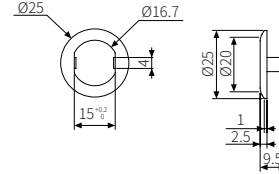

Specifications

Model	BRQ□□-TDT□-□□□□	BRQ□3M-PDT□-□□□□	BRQ□□-DDT□-□□□□
Sensing type	Through-beam	Polarized retroreflective	Diffuse reflective
Sensing distance	5 m 20 m 30 m	3 m ⁽⁰¹⁾	100 mm ⁽⁰²⁾ 400 mm ⁽⁰²⁾ 1 m ⁽⁰³⁾
Sensing target	Opaque materials	Opaque materials	Opaque, translucent materials
Min. sensing target	≥ Ø 7 mm	≥ Ø 75 mm	-
Hysteresis	-	-	≤ 20% of sensing distance
Response time	≤ 1 ms	-	-
Light source	Red	Red	Infrared Red Red
Peak emission wavelength	660 nm	660 nm	850 nm 660 nm 660 nm
Sensitivity adjustment	YES (Adjuster)	YES (Adjuster)	YES (Adjuster)
Mutual interference prevention	-	YES	YES
Operation mode	Light ON mode - Dark ON mode selectable (Control wire)		
Indicator	Operation indicator (yellow), stability indicator (green), power indicator (red) ⁽⁰⁴⁾		
Approval	CE, RoHS, ENEC	CE, RoHS, ENEC	CE, RoHS, ENEC

01) Reflector (MS-2A)

02) Non-glossy white paper 100 × 100 mm

03) Non-glossy white paper 300 × 300 mm


04) Only for the emitter

Unit weight (packaged)	Material	Through-beam	Polarized retroreflective, Diffuse reflective
Cable type	SUS316L	≈ 140 g (≈ 220 g)	≈ 70 g (≈ 150 g)
	Brass, Ni-plate	≈ 140 g (≈ 220 g)	≈ 70 g (≈ 150 g)
	Plastic	≈ 110 g (≈ 160 g)	≈ 60 g (≈ 120 g)
	Plastic (short)	≈ 100 g (≈ 150 g)	≈ 50 g (≈ 120 g)
	SUS316L	≈ 50 g (≈ 160 g)	≈ 30 g (≈ 140 g)
Connector type	Brass, Ni-plate	≈ 50 g (≈ 160 g)	≈ 30 g (≈ 140 g)
	Plastic	≈ 25 g (≈ 110 g)	≈ 15 g (≈ 110 g)
	Plastic (short)	≈ 20 g (≈ 100 g)	≈ 10 g (≈ 100 g)


Power supply	10-30 VDC= ±10% (ripple P-P: ≤ 10%)
Current consumption	It depends on the sensing type
Through-beam	Emitter: ≤ 20 mA, receiver: ≤ 20 mA
Reflective	≤ 30 mA
Control output	NPN open collector output / PNP open collector output model
Load voltage	≤ 30 VDC=
Load current	≤ 100 mA
Residual voltage	NPN: ≤ 2 VDC=, PNP: ≤ 2 VDC=
Protection circuit	Reverse power/output protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC= megger)
Noise immunity	±240 VDC= the square wave noise (pulse width: 1 μs) by the noise simulator
Dielectric strength	1,000 VAC~ 50/60 Hz for 1 min
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx
Ambient temperature	-25 to 60 °C, storage: -30 to 70 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	IP67 (IEC standard) SUS316L material model: IP67 (IEC standard), IP69K (DIN standard)
Connection	Cable type / Connector type model
Cable spec.	Ø 4 mm, 4-wire, (Emitter: 2-wire), 2 m
Wire spec.	AWG26 (0.52 mm, 20-core), insulator outer diameter: Ø 1 mm
Connector	M12 4-pin plug type
Material	Case: It depends on the model. (refer to 'Ordering Information'), lens and lens cover: PMMA

Feature Data: Through-beam Type


Sensing area




BRQT20M-TDTA-C

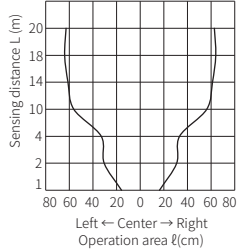


BRQP5M-TDTA

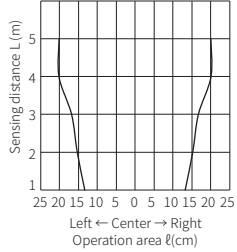


BRQP20M-TDTA-C-P

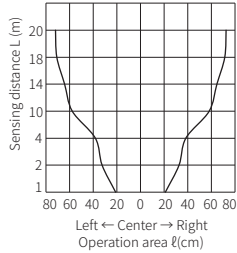


BRQP30M-TDTA-C

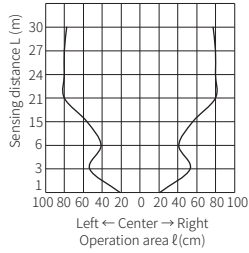


BRQT5M-TDTA

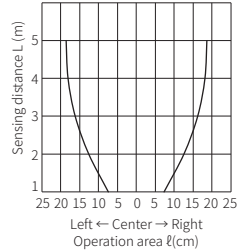


BRQT30M-TDTA-P

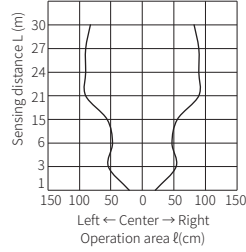


BRQP5M-TDTB

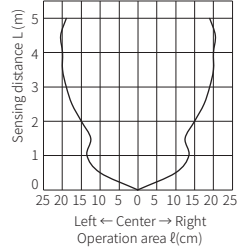


BRQP20M-TDTB

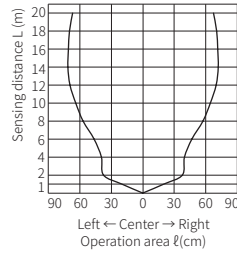


BRQP30M-TDTB

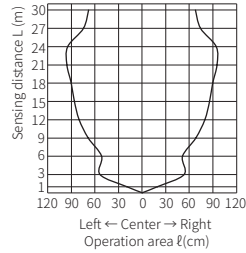


Emitter angle

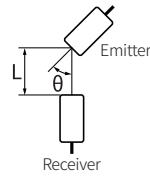


BRQT20M-TDTA-C

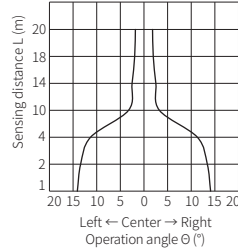


BRQP5M-TDTA

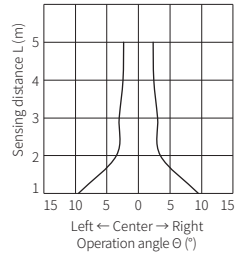


BRQP20M-TDTA-C-P

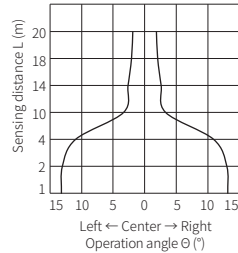


BRQP30M-TDTA-C

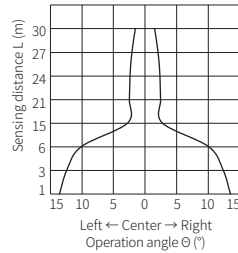


BRQT5M-TDTA

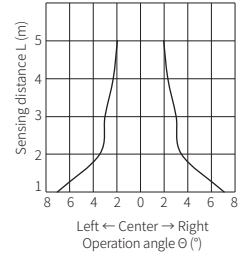


BRQT30M-TDTA-P

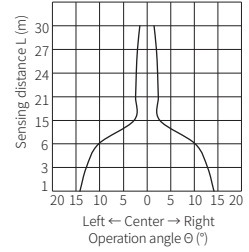


BRQP5M-TDTB

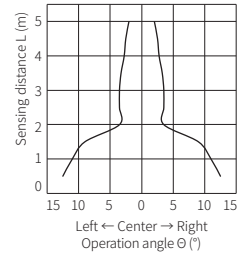

BRQP20M-TDTB

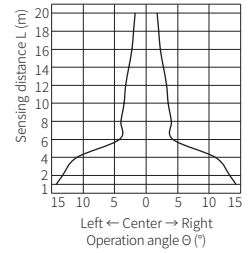


BRQP30M-TDTB

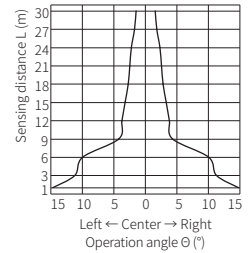


Feature Data : Polarized Retroreflective Type


■ Sensing area




• BRQT3M-PDTA-C-P

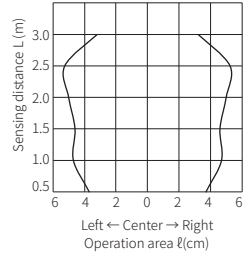


• BRQP3M-PDTA-P

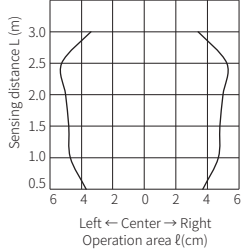


• BRQP3M-PDTB

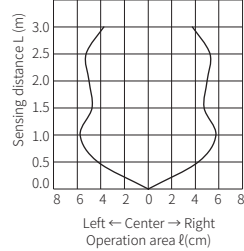


■ Sensor angle




• BRQT3M-PDTA-C-P

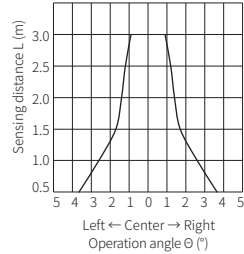


• BRQP3M-PDTA-P

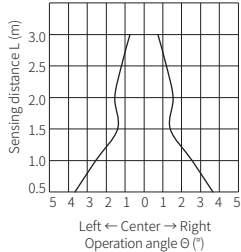


• BRQP3M-PDTB

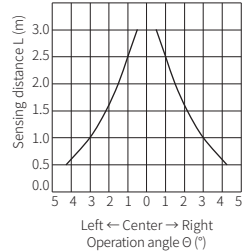


■ Reflector angle




• BRQT3M-PDTA-C-P

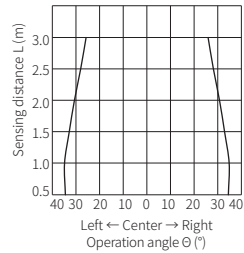

• BRQP3M-PDTA-P

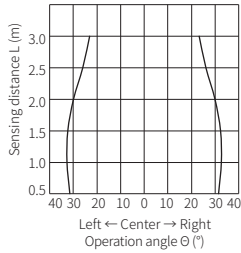


• BRQP3M-PDTB

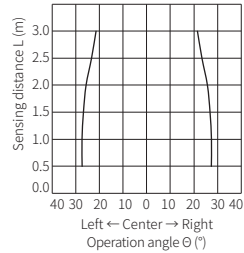


Feature Data: Diffuse Reflective Type


■ Sensing area

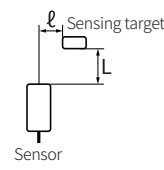


• BRQT100-DDTA

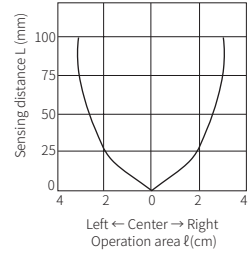


• BRQT400-DDTA-C

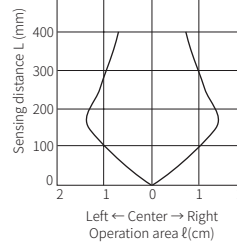


• BRQT1M-DDTA-P

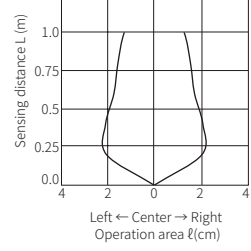


• BRQP100-DDTA-C-P

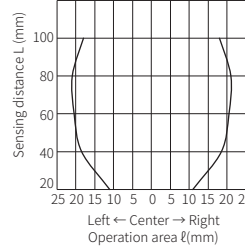


• BRQP100-DDTB

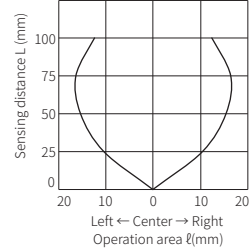


• BRQP400-DDTA

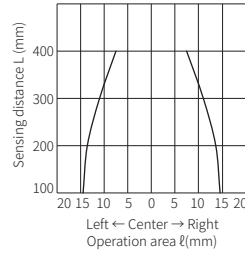

• BRQP400-DDTB

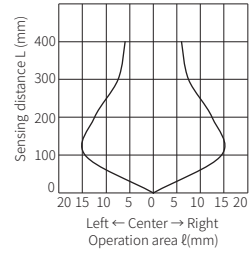

• BRQP1M-DDTA-C

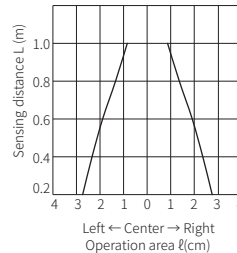

• BRQP1M-DDTB

